

Maintenance Instruction Automatic Vent

The automatic vent is a toilet part that asks for regular maintenance

- * To prevent sticking of the foam part to the seal of the green/grey button, which causes splashing when opening the blade;
- * to prevent obstruction by for example toilet paper, which causes leakage.

Sticking



There are two different automatic vent buttons:






Automatic vent belonging to the outside vent.

Instruction

1. Remove the automatic vent from the waste holding tank by turning the automatic vent 60 degrees to the left.



2. Split the automatic vent in the two main parts: the green/grey button and the white foam part. To do this, you'll have to push in the green button and at the same time push with your other hand against the white foam (A). Carefully move the parts until you feel the thin pin, which connects the two main parts, coming out of its setting. Now you can carefully pull the pin from the green/grey part (B).

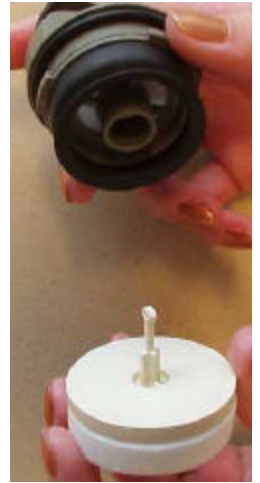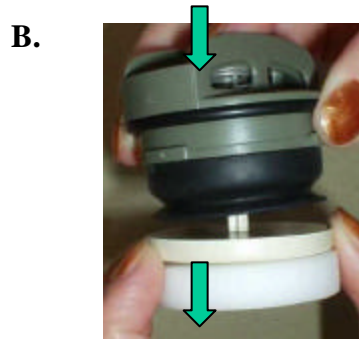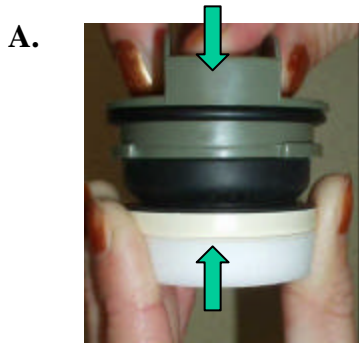

3. Split the two parts further into separate parts.



4. Clean the parts with Thetford Plastic Cleaner, Bathroom Cleaner or just warm water.
Warning: never use powerful cleaning agents. Coat the seals with Thetford Seal Lubricant or olive oil.
5. Rebuild the part.
Warning: Carefully replace the pin of the foam part into the green part (B). Carefully push the two parts towards each other, move the parts until you feel that the pin has fallen into its setting (A). Now you can replace the automatic vent in the waste holding tank.

B.



A.

